

Manual Object Detector S-SW-8

02-22-2021

1	Function, Construction and Purpose	2
2	Evaluation Unit.....	3
2.1	Electrical Connections	3
2.2	Sensor Electrodes	4
2.3	Configurations and Indication elements.....	5
2.3.1	SW1: Set sensitivity (relay switching point) & start calibration (SW2-2 OFF)	5
2.3.2	SW2: Setting of functional properties	5
2.3.3	Indication Elements.....	6
2.4	Installation	6
2.4.1	Starting manual adjustment - switch SW2-2 to "OFF"	6
2.4.2	Sensitivity setting (relay switching point)	6
2.5	Technical Data.....	7
3	Montage & Cabling	8
3.1	System arrangement	8
3.2	Electrical connections	9
4	Installation.....	9

Warning! Advisement about the difference between S-SW-8 and S-SW-3:

Differently of S-SW-3, the first time that S-SW-8 starts operation, an adjustment must be triggered with empty sensor detection area. To do this, press SW1 at least 5 seconds, until the LED4 lights up red (calibration started). The calibration process is completed when LED1 flashes green. Only after that objects can enter the detection area (relay switches on) or the sensitivity can be changed. We recommend using the automatic sensitivity adjustment.

1 Function, Construction and Purpose

The object detector S-SW-8 is a capacity sensor system with a differential signal evaluation to detect the presence of metallic and other conductive objects **contactlessly** with the help of connected sensor electrodes.

The object detector S-SW-8 is mainly used in conveyor technology to control roller conveyors. This sensor system offers particular advantages in heavily polluted environments, like rolling mills, blasting systems, paint booths, etc. The reason is the insignificant effect on the functions from contamination of slag, metal dust or blasting media on its detection area.

On the first use, the unit must run the calibration process. The detector area must be free of mobile objects and people during the calibration process. The bias point state is recorded and saved as a reference.

After that, objects can enter the detection area. If the sensitivity is set appropriately, the presence of the new objects is detected. A potential-free contact relay turns ON/OFF according to the IN/OUT movement of objects over the sensing area (the switching position vary according to the type of objects and configured sensitivity).

The sensor system consists of two parts:

- 1. Evaluation unit : Correct connection of the reference potential for the evaluation unit is essential for proper functionality (connection of the earth potential) (X1/3).**

The evaluation unit uses sensor electrodes for detection. They are mounted in a poly-carbonate case (IP65) and placed near the electrodes.

- 2. Sensor electrode : The sensor electrodes are not included in the delivery package.** Their design depends on the specific user application and must be carried out in compliance with certain rules (see below) in accordance with the technical requirements. The shape of the electrodes determines the detection area:

- Narrow electrodes cause **small switching hysteresis**,
- wide electrodes cause **large switching hysteresis**.

The electrodes are connected to the evaluation unit.

2 Evaluation Unit

The evaluation unit is built into a poly-carbonate housing (IP65). The electrical connections to the power supply, reference potential, sensor electrodes and relay contacts are established via three cable connections.

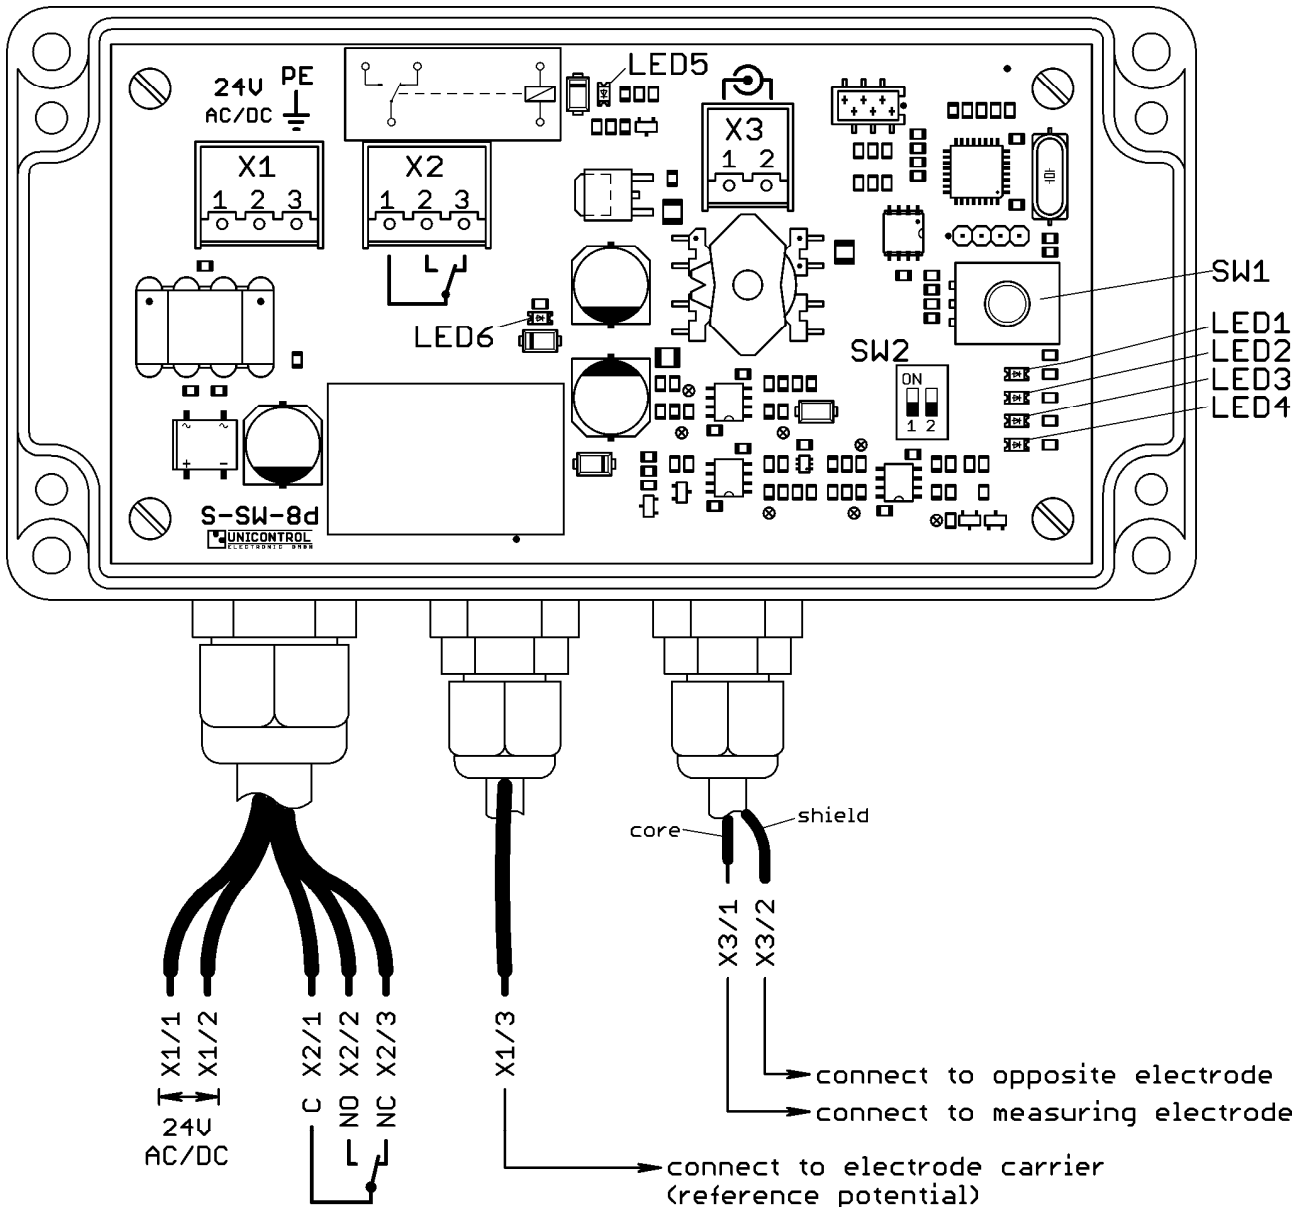


Figure 1

2.1 Electrical Connections

Con- nector	Pin	Connection	
X1	1	24 V _{AC/DC}	Supply Voltage Both polarity accepted
	2		
	3	PE	Reference Potential Connected to the earth
X2	1	C	Relay common contact
	2	NO	Relay normally open contact
	3	NC	Relay normally closed contact
X3	1	Core	Connected to the measuring electrode. Use coaxial cable (75Ω)
	2	Shield	Connected to the opposite electrode

By inductive load connected on X2 (relay output), use spike suppression to prevent damage of the relay contacts.

The connection to the sensor electrodes is made by the 2-pole connector X3 and a coaxial cable. According to the drawing (see Figure 1), the core is connected to the left terminal X3/1 (measuring electrode) and the shield to the right terminal X3/2 (opposite electrode).

2.2 Sensor Electrodes

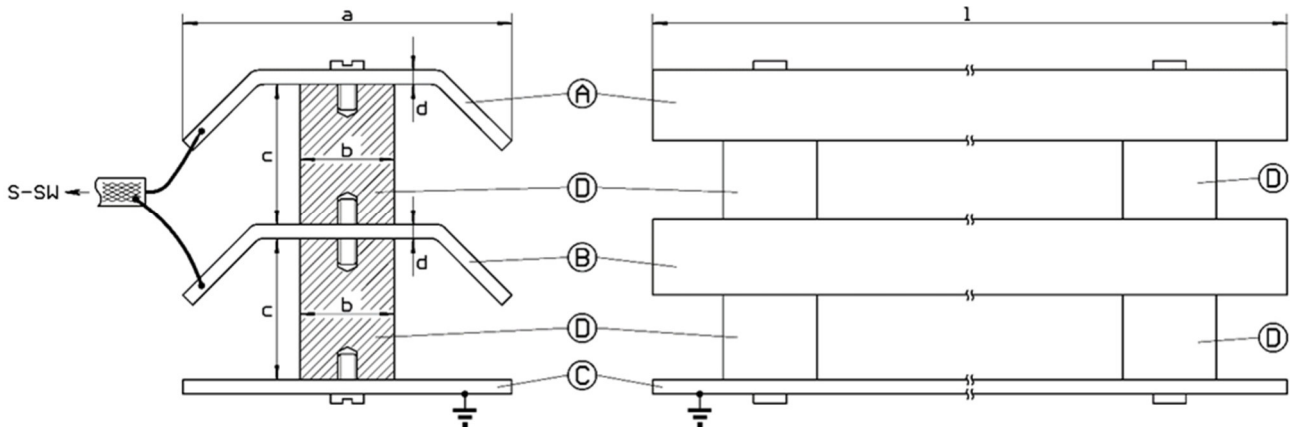


Figure 2

Basically: Narrow sensor electrodes → small switching hysteresis
 wide sensor electrodes → large switching hysteresis

The sensor electrodes can have any geometric shape. It is only important that the two electrodes have approximately the same area and are fixed to a grounded structure.

Measurement electrode	A : The measurement electrode is connected to X3/1 of the evaluation unit via the core conductor of the coaxial cable.	The measurement and opposite electrodes must be made of conductive material (sheet steel, aluminum, etc.). They should have the same design.
Opposite Electrode	B : The opposite electrode is connected to X3/2 of the evaluation unit via the shield of the coaxial cable.	
Montage structure	C : The design of the mounting structure depends on the conditions at the installation place. It must be made of conductive material (metal, for further examples see above). The mounting structure must be connected to the earth potential!	
Spacers	D : The spacers must be made of electrically isolating material (plastic / ceramic, see table below).	

Construction Rules

		min.	max.	Info
Electrodes wide	a	10 mm	200 mm	
Spacer diameter, Ø	b	no specification	no specification	Electrically isolating material (plastic / ceramic). The selected diameter must ensure sufficient mechanical stability. Spacers are available as accessories from UNICONTROL (UC spacer M4, M6, M10 and M12).
Electrodes gap	c	5 mm	80 mm	
Material Mechanical Capacity	d	no specification	no specification	The material mechanical capacity is not critical. It should be chosen considering that the electrodes have enough mechanical stability.
Electrodes length	l	20 mm	4000 mm	

The sensor electrodes can have any geometric shape. It is important that the two electrodes have approximately the same areas.

Warning:

! The earthed mounting structure "C" must be connected to the reference potential of the evaluation unit (X1/3) via its own line!

The potential of the mounting structure (PE) serves as a reference potential for the evaluation unit.

! The number of spacers should be calculated and distributed over the length of the electrodes to guaranty reasonable mechanical stability.

! The measurement and opposite electrodes must be fixed on the mounting structure avoiding electrical contact. Ignoring this rule, will change the way the electrodes work and make them unusable for the application.

2.3 Configurations and Indication elements

2.3.1 SW1: Set sensitivity (relay switching point) & start calibration (SW2-2 OFF)

With the rotational selector SW1 the sensitivity (switching point of the relay) is set and a new adjustment of the bias point of the S-SW-8 can be triggered.

- **SW1 cw rotation** → Increase sensitivity
- **SW1 a-cw rotation** → Decrease sensitivity
- **SW1 > 5s pushing** → New calibration of the sensor is done. The LED4 blinks until the calibration process is completed (up to 60s). The settings of sensitivity, hysteresis and memory function are preserved.

2.3.2 SW2: Setting of functional properties

The 2-poles switch SW2, leads to the following behavior of the evaluation unit:

Hysteresis SW2-1	
ON	10 %
OFF	5 %



Memory-Function SW2-2	
ON	active
OFF	inactive



♥ = Default values

- **Hysteresis (5 or 10%)** : It is the difference in the sensor signal between the switch-on point (occupied) and the switch-off point (free) for the relay. The sensor signal level for the switch-ON point is stronger than the switch-OFF point. A larger hysteresis means that the switch ON/OFF points are distanced.
- **Memory Function OFF : Each time the power supply of the evaluation unit is switched ON, SW2-2 = OFF** : **Each time the power supply of the evaluation unit is switched ON, a new adjustment is started automatically.** The last set sensitivity counter is retained, but all other operating parameters are reset to the current operating situation. The readjustment means that any objects that are located in the detection area are "forgotten". This means that the relay is dropped out, even if it was ON in the last power down. Only additional objects would switch the relay on again!
- **Memory Function ON : When the power supply of the evaluation unit is switched ON, SW2-2 = ON** : **When the power supply of the evaluation unit is switched ON, no new adjustment is made.** The last valid operating parameters are restored from nonvolatile memory and used. Changes in the reference conditions in the meantime are taken into account by moving the reference point. **This function is useful and recommended if there is a work-piece in the detection area at the time of switch-OFF and should be recognized when it is switched ON again. However, it must be the same object in the same position, otherwise the difference is treated as a change in the reference conditions. This would result in an invalid displacement of the reference point and thus a malfunction.**

! **Case a detected object is removed from the detection area while the sensor is turned-OFF, in the next turning-ON, the sensor will incorrectly behave as if the object is still there and the relay will**

switch-ON. This unexpected behavior can be easily corrected by touching the main electrode (forcing over driven state – LED3 ON) for at least 4s when the relay goes OFF and the sensor recovers the operational state as soon as the electrode stay free again (untouched).

2.3.3 Indication Elements

LED1 Is active during the measurement process. Its activity allows an approximated idea of the signal intensity of the sensor electrodes caused by an object in the detection area.

- Slow blinking (1/s) : The sensor is free or only slightly occupied.
- Moderated blinking (2/s) : The sensor is moderately busy.
- Fast blinking (4/s) : The sensor is heavily occupied.
- Always ON (1) : The sensor is over-shoot and near or over the limit of the measurement range (see also LED3).

LED2 Indicates how long the push button (SW1) is pressed:

0 s ... 2 s	→ LED2 OFF
2 s ...3 s	→ LED2 ON
> 5 s	→ LED2 OFF and LED4 ON

LED3 Lights up when the sensitivity range is exceeded (clipping).

LED4 Indicates the error status or the adjustment process:

- Slowly blinking (1/s) : The sensor unit is in the adjustment mode.
- Always ON (1) : The unit is in the error state and cannot work. In this case a restart or re-calibration is necessary.

LED5 Lights up when the relay is switched ON (sensor electrode busy).

LED6 Is the <in operation> indicator and lights up when the supply voltage is switched ON.

2.4 Installation

2.4.1 Starting manual adjustment - switch SW2-2 to "OFF"

The adjustment evaluates and saves the reference value of the system.

! The sensor electrodes must be free when performing a new adjustment! No objects or person may be near the sensor electrodes.

SW2-2 = OFF: After power ON, the evaluation unit automatically starts a calibration process. (Memory OFF)

SW2-2 = ON: The unit starts without adjustment. The operating parameters are restored from memory and they are exactly the same ones when the unit was powered DOWN. (Memory active)
New adjustment can be done by pressing the SW1 button for more than 5s.
LED2 provides information on the elapsed time when pressing SW1: After 2s, it lights UP and after 5s it goes OFF again.

The following applies to the adjustment :

- During the calibration process, LED4 blinks slowly.
- The calibration process has been successfully completed when LED4 stays OFF and LED1 blinks slowly.
- If no bias point can be found during the adjustment, the evaluation unit changes to the error state. This is indicated by the constant lighting of LED4. The error state must then be corrected and a new adjustment must then be carried out.
- An adjustment process can take up to 60 seconds.

Regardless of the setting of SW2-2, an adjustment process can be done at any time by pressing the SW1 button at least for 5s.

2.4.2 Sensitivity setting (relay switching point)

! To guaranty safe functionality, the sensitivity should only be set as high as necessary!

The setting of the sensitivity with SW1 takes place basically with the smallest objects that enters on the detection area. When setting, the object to be recognized must stay in the detection area.

Attention: People must not be near the sensor electrode!

There are two possible configuration methods:

1. Automatic: Pressing the SW1 button for 2s... 3s when the LED2 lights up.

With a small time delay, the unit adjusts the sensitivity to match the object in the detection area. If the relay was previously switched OFF, it now switches ON. Case the relay was already ON, it stays ON until the object is removed from the detection area.

2. Manual:

- **If the relay is OFF** (LED5 is OFF)
Rotate switch SW1 clock-wise until the relay switches ON, then go three points further.
- **If the relay is already ON** (LED5 ON)
Rotate switch SW1 anti-clock-wise until the relay switches OFF (LED5 OFF). Then return until the relay switches ON again (LED5 ON) plus three points.

If necessary, the sensitivity can be adjusted manually at any time by turning the switch SW1. The sensitivity setting is saved and valid even after unit power down.

2.5 Technical Data

Parameter	Sim	Condition	min	tip	max	Unit
Supply Voltage	U_V	AC/DC	18	24	30	V
Operation Power	I_V	$18V \leq U_V \leq 30V$			3	W
Environment Temperature	T_F	In operation	-15	+20	+55	°C
	T_L	Storage	-20		+60	°C
Switching point hysteresis		SW2-1 = OFF		5		%
		SW2-1 = ON		10		%
Conductor cross-section	∅	X1 Without termination	0,2		2,5	mm ²
		X2	24		12	AWG
		X3 solid Termination with cap	0,25		1,5	mm ²
		X3 or flexible Termination without cap	0,25		2,5	mm ²
Isolation length		X1, X2, X3	9		10	mm
Relay contact		Voltage		250	300	VAC
				24	250	VDC
		Current (external protected)			10	A
		Contact resistance			0,1	Ω
Case	L	Length		160		mm
	B	Wide		80		mm
	H	High		55		mm
		Material	Poly-carbonate			
		Protection level	IP65 / DIN 40050			
		Color	RAL 7035			

Con-connectors	Pin	Connection	
X1	1	24V _{AC/DC}	Supply voltage The polarity is interchanged.
	2		
	3	PE	Earth potential Connected to the mounting structure of the sensor electrodes.
X2	1	C	Relay common contact
	2	NO	Relay normally open contact
	3	NC	Relay normally closed contact
X3	1	Core	On measurement electrode connected
	2	Shield	On the opposite electrode connected Coaxial cable

3 Montage & Cabling

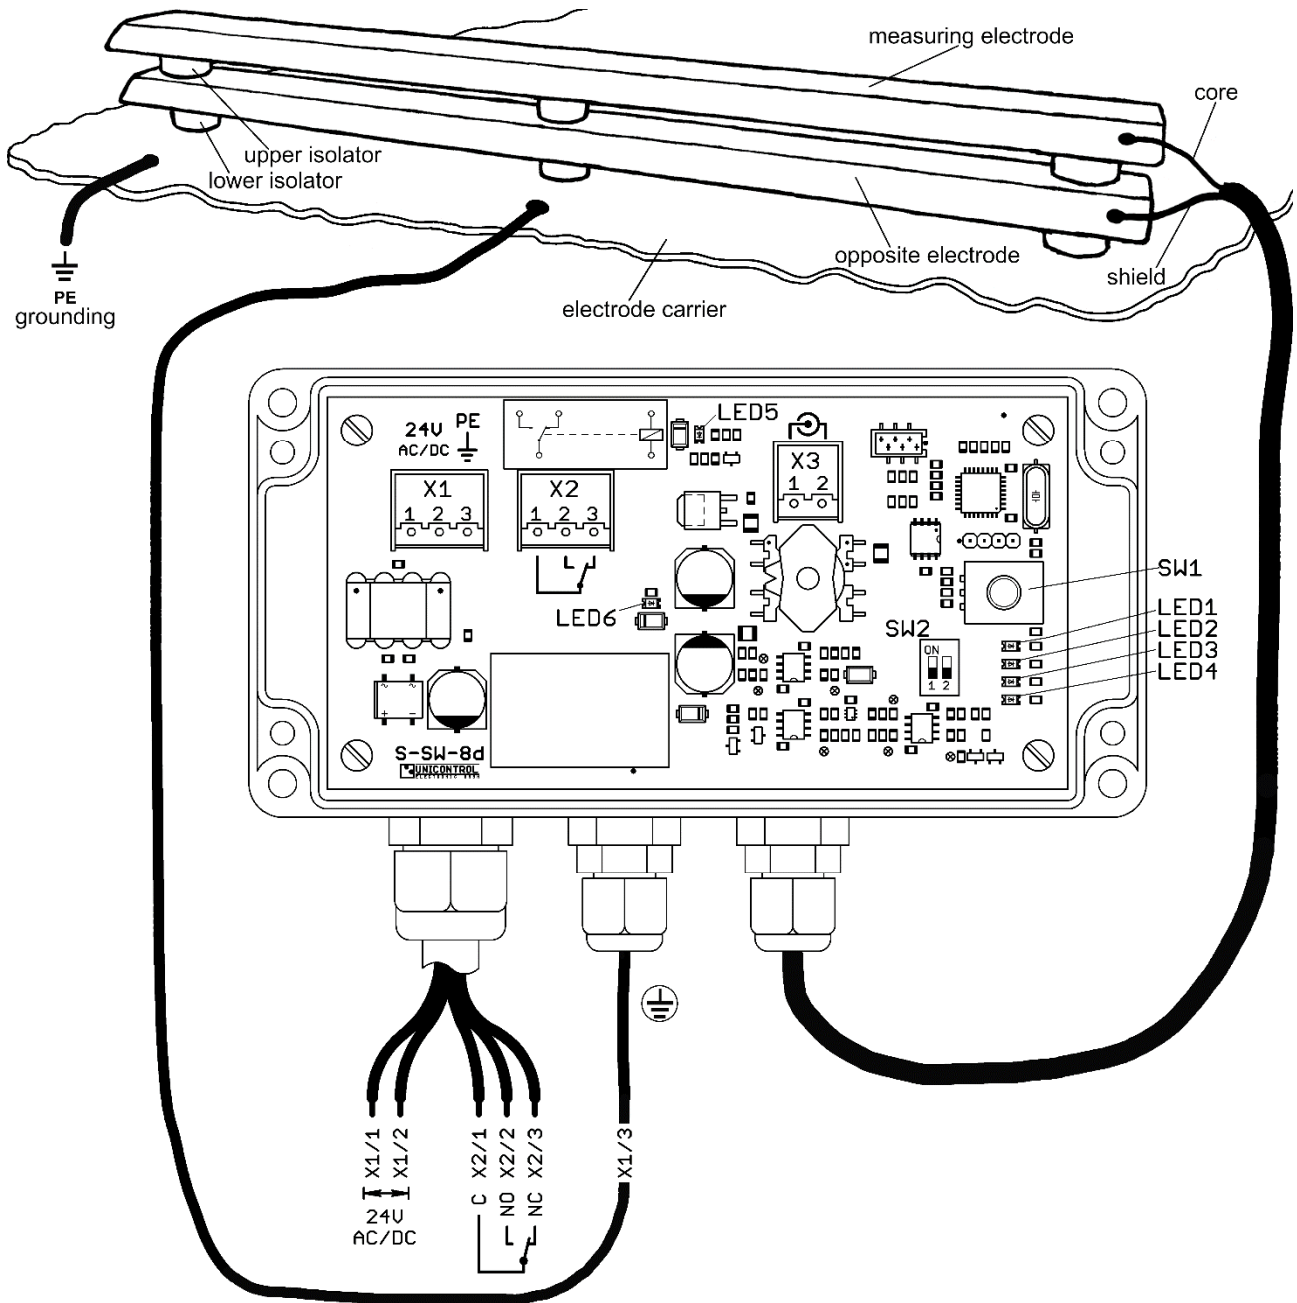


Figure 3

3.1 System arrangement

The sensor electrodes must be manufactured as described in chapter "2.2 Sensor Electrodes".

The following basic rules apply to the assembly of the system:

- Montage and adjustment should only be done by qualified person.
- The sensor electrodes should be installed in such a way that the measurement electrode stays as close as possible to the objects to be detected. This ensures safe switching behavior.
- The evaluation unit should be installed near the sensor electrodes. The sensor line (coaxial cable between the evaluation unit and sensor electrodes) should be limited to a maximum length of 100 cm.
- The device may only be operated with the plastic cover closed!

Before connecting the coaxial cable to the electrodes, check that:

- there is no short circuit between measurement electrode "A" and its opposite "B",
- there is no electrical connection between the electrodes and the mounting structure "C",
- there is no electrical connection to the machine ground.

3.2 Electrical connections

- Sensor Electrodes:
 - Coaxial Cable Shield: from the evaluation unit X3/2 to the opposite electrode "B".
 - Coaxial Cable Core: from the evaluation unit X3/1 to the measurement electrode "A".
- Evaluation unit:
 - Connect X1/1 and X1/2 to the power supply (24V AC / DC). The polarity \pm doesn't matter.
 - **Connect X1/3 to the earth of mounting structure "C" using a separate cable.**
No additional connection to the earth potential is admitted from here! X1/3 is not used for safety grounding, but exclusively for reference potential at the sensor electrodes.
 - Connect X2 (relay contacts) to the higher-level control system according to their function.
 - Connect X3/1 to the sensor electrode "A" through the internal conductor of the coaxial cable.
 - Connect X3/2 to the opposite electrode "B" through the shield of the coaxial cable.

4 Installation

- 1.: Produce and install the sensor electrodes as described in chapter "2.2 Sensor Electrodes".
- 2.: Place Electrodes and evaluation unit as close as possible. Connection cables may not exceed 100cm.
- 3.: Check and make sure that there is **NO**:
 - short circuit between the electrodes,
 - electrical connection between measuring or opposite electrodes and mounting structure.
 - electrical connection to the machine ground.
- 4.: Connect the coaxial cable to the sensor electrodes. The core goes to the measurement electrode and the shield to the opposite one.
- 5.: Connect the reference potential of the evaluation unit X1/3 direct to the earthed mounting structure.
- 6.: Connect the supply voltage (24VAC / DC) to the evaluation unit (X1/1, X1/2).
- 7.: First operation

By the first operation an adjustment must be made. The state of the detect area will be evaluated and saved as a reference.

! The detection area must be free to process adjustment! No working pieces, stored objects or people may stay around, since they influence the adjustment signal.

a) Switch on the evaluation unit. The green LED6 must light up.

b) Carry out adjustment
The adjustment behavior of the evaluation unit depends on the switch SW2-2 settings:
SW2-2 OFF After first switching ON, the evaluation unit starts an automatic adjustment.
SW2-2 ON The **adjustment is not automatically** carried out. Adjustment must be forced by pressing the SW1 button for at least 5s.
The elapsed time can be seen on the behavior of LED2: After 2s, LED2 lights UP and after 5s it goes OFF again. The adjustment process starts shortly. The button SW1 can now be released.
With SW2-2 = ON, the operating parameters from the last application still apply. This can lead the unit changing to the error state. The red LED4 then indicates this state by permanently lighting.

 - The red LED4 blinks during the adjustment process.
 - The adjustment process has been successfully completed when LED1 blinks (1 / s).
 - If no working point is found during the adjustment, the evaluation unit changes to the error state. This is indicated by the constant lighting of the red LED4.
- 8.: Place the working object in the sensing area.

9.: Set sensitivity:

Depending on the currently sensitivity value, the positioned object can switch the relay ON via the sensor electrodes, or the relay remains switched OFF. The red LED5 lights up to indicate when the relay is switched ON.

In any case, the sensitivity must be set to match the working object as described below.

! For proper functionality, the **sensitivity** should only be set **as high as necessary!**

There are two possible methods of setting the sensitivity:

1. Automatic: The evaluation unit adjusts the sensitivity to match the positioned object in the detection area. If the relay was previously switched OFF, it switches on. If it was already ON, it will keep ON until the object is removed.

The procedure is as follows:

- Place the object in the detection area.
- Press button SW1 for 2s... 3s
After 2s, LED2 lights up indicating 2s gone.
- Release button SW1.

LED2 goes out. You now have 3 seconds to move away from the area of the sensor electrodes, so that, your presence does not influence the measurement of the object.

When 3s are done, the optimum sensitivity for the working object is set. LED2 confirms the process by flashing briefly.

2. Manual: – **Relay OFF (LED5 OFF):**

Rotate the switch SW1 clock-wise until the relay switches ON, plus three more points.

– **Relay ON (LED5 ON):**

Rotate switch SW1 anti-clock-wise until the relay switches OFF (LED5 OFF), then return until the relay switches ON again (LED5 ON) plus three points.

Case the current sensitivity shows impractical, it can be adjusted manually at any time by turning the switch SW1.

The new sensitivity setting is saved and also effective by the next time the evaluation unit is switched ON.

Function Explanation (Turning OFF without memorization)

Case the detector device is switched OFF while the memory function is inactive and an object is left in the detection area, the device “ignores” this condition. In this case, when the device is switched ON again, it will proceed with a new adjustment considering free detection area and the relay will stay OFF.

To be sure about this procedure, one can move his hand to the detection area to see the relay turning ON. After removing the object and subsequently the hand from the detection area, the relay turns OFF again and around 2s later the new conditions will be detected by the device as empty area.